

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Ways with wood  
with Mark Rayner – 63

### You will need:

- Bucket
- Garden sprayer
- Hose with clean running water
- Paintbrush
- Paint stirrer
- Resene Waterborne Woodsman penetrating oil stain tinted to Resene Cherrywood
- Resene Moss & Mould Killer
- Resene Timber and Deck Wash
- Stiff-bristled broom




#### Step one

Brush down the old wood with a stiff-bristled broom to remove any dust and dirt.



#### Step two

Mix one part Resene Moss & Mould Killer to five parts clean water and fill the garden sprayer with the diluted solution.

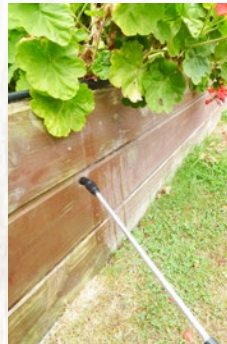

#### Step three

Generously soak the wooden raised bed with the solution and leave for 48 hours.



#### Step four

Mix one part Resene Timber and Deck Wash to three parts water.



#### Step five

Scrub the solution vigorously into the wood using a stiff-bristled broom. Allow the wood to remain wet for ten to fifteen minutes and then rinse thoroughly with clean water. Allow to dry.



#### Step six

Carefully stir the Resene Woodsman penetrating oil stain with a paint stirrer.



#### Step seven

Apply one coat of Resene Waterborne Woodsman penetrating oil stain to the wooden raised bed, brushing in the direction of the grain, and allow to dry for 2 hours.




#### Step eight

Apply a second coat of Resene Waterborne Woodsman penetrating oil stain to the raised bed, brushing in the direction of the grain. Again, allow 2 hours to dry.



### To get the look:

Mark painted the foreground plant pot with a Resene testpot of Resene Spritzer.

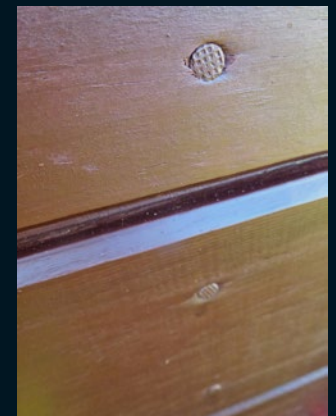

### Other ideas:

For a soft blue effect stain the wooden raised bed with Resene Waterborne Woodsman tinted to Resene Pickled Bluewood.

For more ideas and inspiration visit your local Resene ColorShop or [www.resene.com/colorshops](http://www.resene.com/colorshops).

Check out more project ideas online [www.resene.com/projects](http://www.resene.com/projects).