


★☆☆ Difficulty level ★ easy ★★ moderate ★★★ challenging

Weekend DIY with Mark Rayner – 58

You will need:


- 75mm exterior screws
- Clean cloth
- Drill
- Old wooden bed head (unpainted)
- Paint stirrer
- Paintbrush
- Pencil
- Resene Lumbersider tinted to Resene Pale Prim
- Resene Quick Dry
- Sandpaper
- Saw
- Screwdriver
- Spirit level
- Tape measure

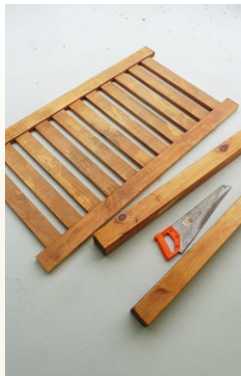

Step one
Remove the side posts from the bed head and then measure, mark and cut the bed head to the required size.



Step two
Place the bed head into position to form the new fence, using the spirit level to ensure that it's level.

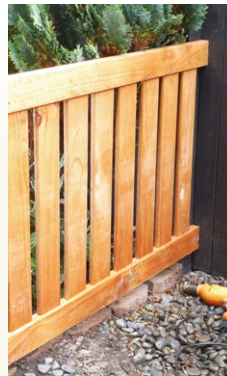

Step three
Fix with 75mm screws, drilling pilot holes first.



Step four
Sand the fence and wipe off any sanding residue with a clean cloth.



Step five
Carefully stir the Resene Quick Dry.



Step six
Apply one coat of Resene Quick Dry to the fence and allow to dry.



Step seven
Carefully stir the Resene Lumbersider tinted to Resene Pale Prim.




Step eight
Apply two coats of Resene Pale Prim to the fence, allowing two hours for each coat to dry.

It's easy to recycle an old wooden bed head into a smart painted fence with a little bit of help from Resene.



To get the look:
Mark stained the background fence with Resene Woodsman tinted to Resene English Walnut.

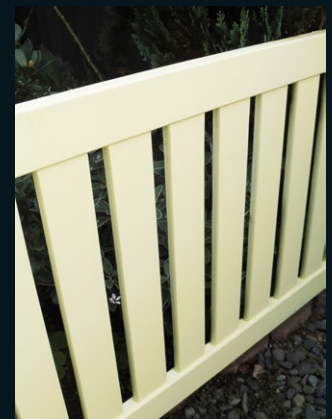

Other ideas:
For a more traditional look, paint the fence with Resene Lumbersider tinted to Resene Alabaster.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.com/colorshops.

Check out more project ideas online www.resene.com/projects.